GRETA CAT ENCLOSURE

ASSEMBLY GUIDE



Welcome!

Congratulations on becoming an owner of a premium Coops and Cages product! We hope it brings you and your pet/s many years of enjoyment and contentment.


When your flat pack arrives, please check all items for any damage that might have occurred in transit.



02 4340 4200

info@coopsandcages.com.au

What you will need

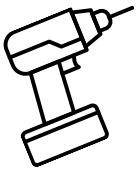

You'll need a battery-powered screwdriver or drill with a Phillips head bit, as well as a flat, level surface to ensure proper alignment of all doors during assembly.

Important Things To Note



1. The instructions and screws can be found in carton #1.


2. A strong smell may be present when opening. This is the natural timber scent and is not harmful to humans or animals. It will fade over time, especially when placed outdoors.

3. When joining two panels, the 1st panel has a guide hole to show where the screw goes. The 2nd panel does not have a predrilled hole. The screw goes directly into the solid timber and forms a tighter join.

4. You may notice a shiny or powdery residue on the panels; this is crystallised sap from the natural wood-drying process. It’s completely safe for pets and people and can be wiped off or left as is.

Check list

P1	3.5×60mm	46pcs+1spare	P2	3.5×45mm	18pcs+1spare
P3	3.5×40mm	52pcs+1spare	P4	3.5×35mm	6pcs+1spare
P5	3.5×25mm	16pcs+1spare	P6	3×16mm	4pcs+1spare
P7	6×35mm	2pcs	P8	6×70mm	3pcs
P9		1pc			

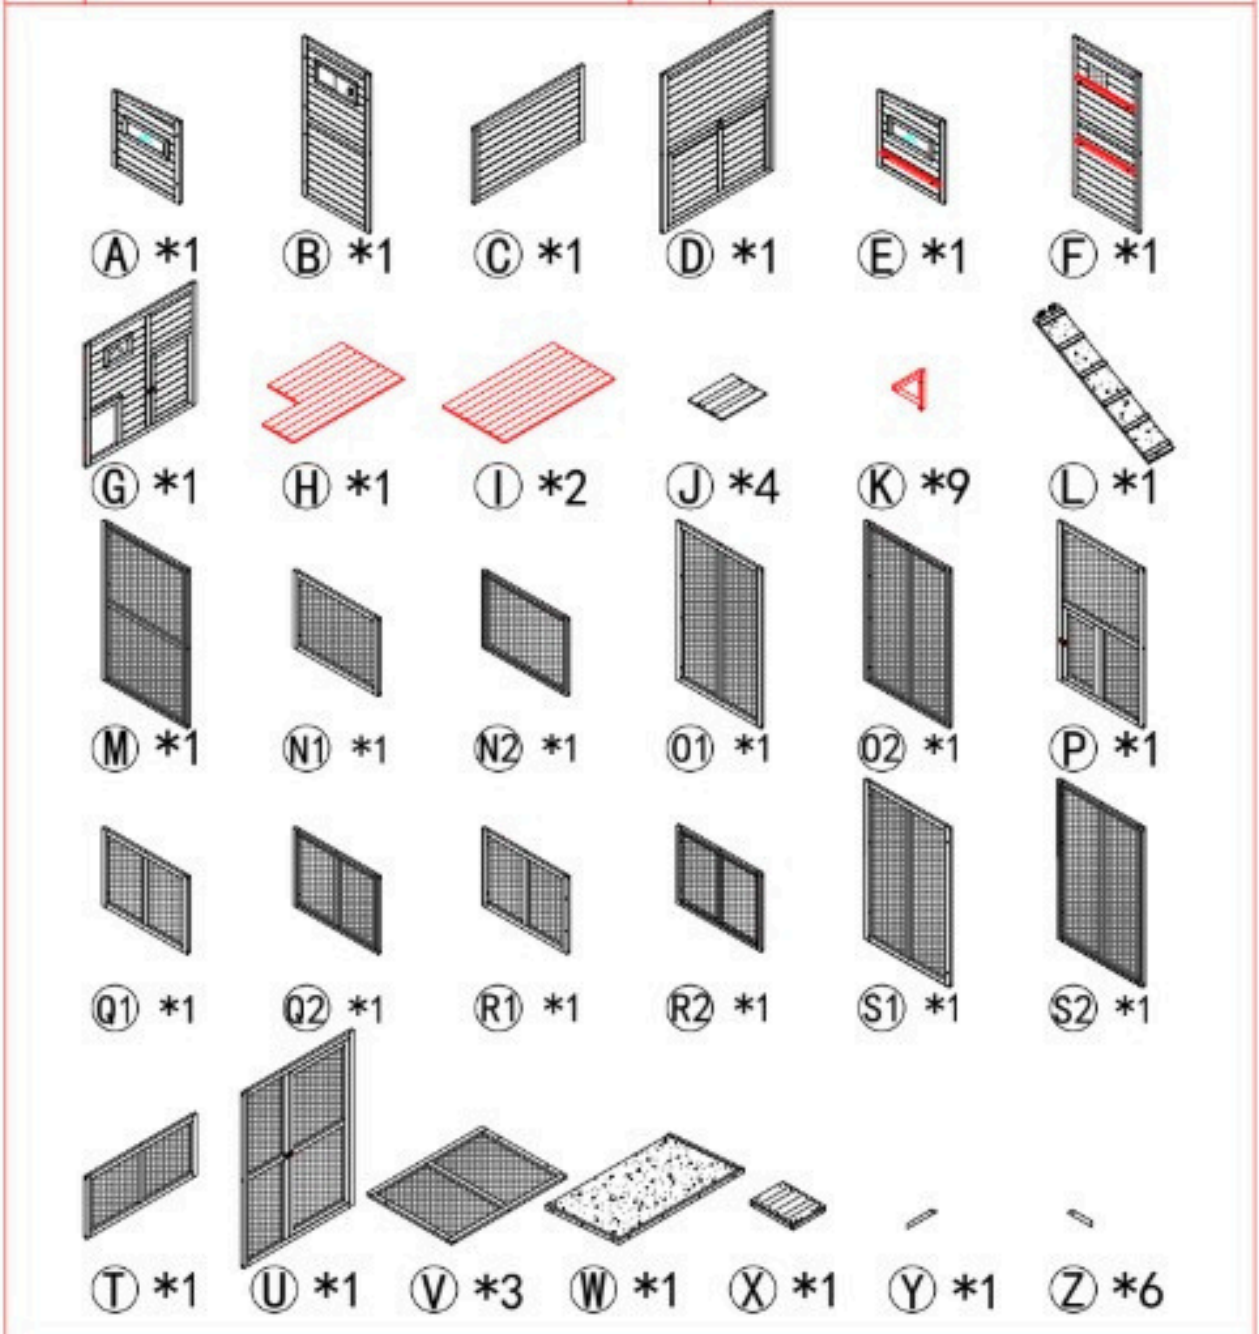

How to Assemble the Greta Step I

PARTS

Parts required for step 1
A, B, C, D, F, P9

Screws required for step 1
P3 x 12, P7 x 2


Assemble The Sides and Back Of House

Attach Panel B to C: Locate the pre-drilled holes on the edge of panel B. Align panel B to C as shown, then screw P3 x 2 through the guide holes to secure.

Attach Panel F to C: Locate the pre-drilled holes on the edge of panel F, then align F with C as shown. Use P3 x 2 to screw through the guide holes to secure.

Attach Panel D: Place panel D on top of panel C, between the two side sections. Locate the pre-drilled holes on the side sections, and use screws P3 x 4 to attach.

Attach Panel A and E: Place panel A on top of B, ensuring the lower angled side is closest to the back of the house. Locate the pre-drilled holes on panel A and use screws P3 x 2 to attach.
Repeat on the opposite side with panel E.

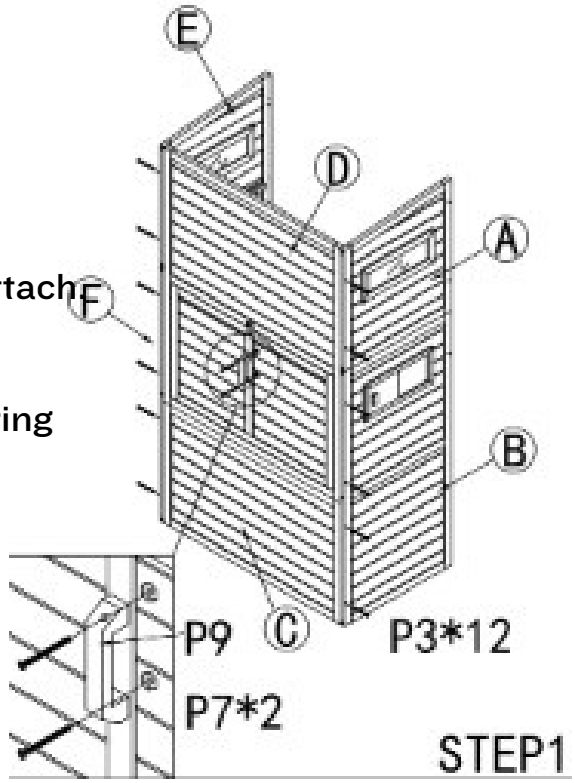

Attach The Door Handle: Align part P9 along the flat strip of timber on the back door. Use nut & bolts P7 x 2 to securely attach.

How to Assemble the Greta Step 2 & 3


PARTS

Parts required for step 2 & 3
G, H, I x 2

Screws required for step 2 & 3
P3 x 6

Assemble The Front Of The House: Place part G between the assembled sides as shown. Locate the pre-drilled holes on the side panels, then use screws P3 x 6 to attach.

Assemble The Floor Sections: Slide I x panel I onto the guide rails at the bottom as shown. Place the second panel I into the middle guide rails, followed by panel H onto the highest rails, taking note of the corner cut out.

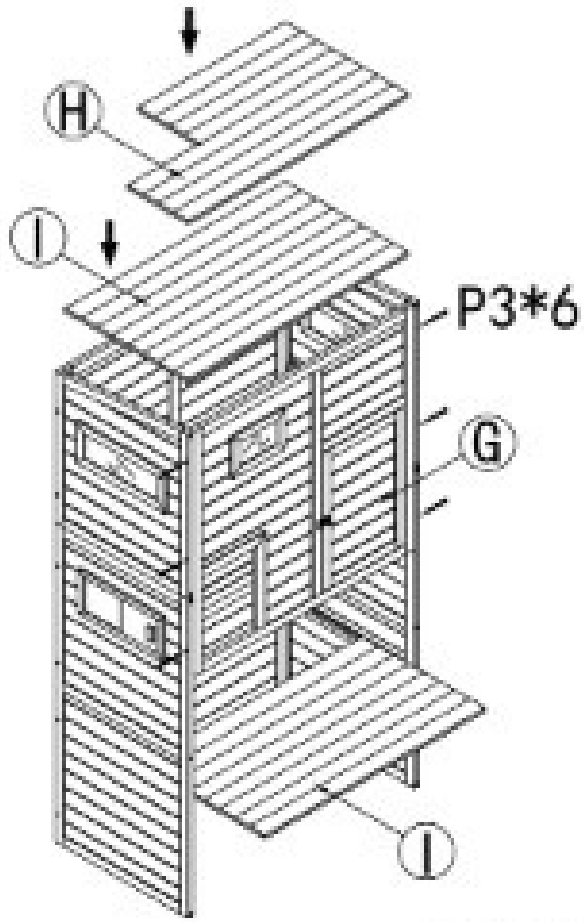

How to Assemble the Greta Step 4

PARTS


Parts required for step 4
X, Y

Screws required for step 4
P8 x 3, P4 x 2

Add The Shelf: Place shelf X below the door opening as shown. ensure the end of the platform with the 2 pre-drilled holes on top is furthest from the house. Use nut & bolts P8 x 3 to attach to the house through the pre-drilled holes as shown..

Next, place bracket Y next to shelf as shown.

Locate the pre-drilled holes at the top and bottom and attach to the door frame and side of the shelf using screws P4 x 2.

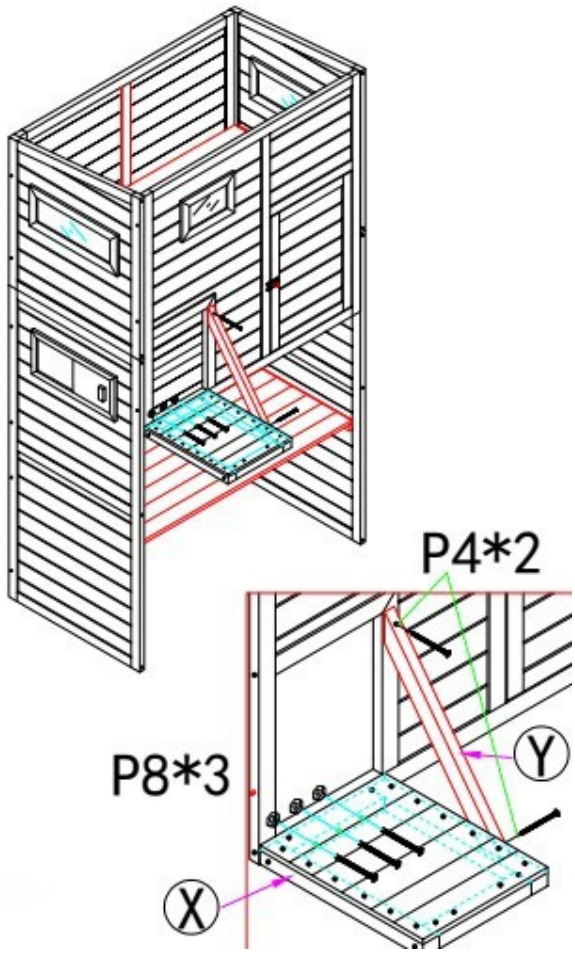


How to Assemble the Greta Step 5

PARTS

Parts required for step 5
L

Screws required for step 5
P6 x 4

Attach The Ramp: Attach ramp part L below one of the small door openings. You can either position it on the edge of the shelf beneath the left-hand door or directly in front of the right-hand side door.
Use screws P6 x 4 to attach the hinges along the edge.

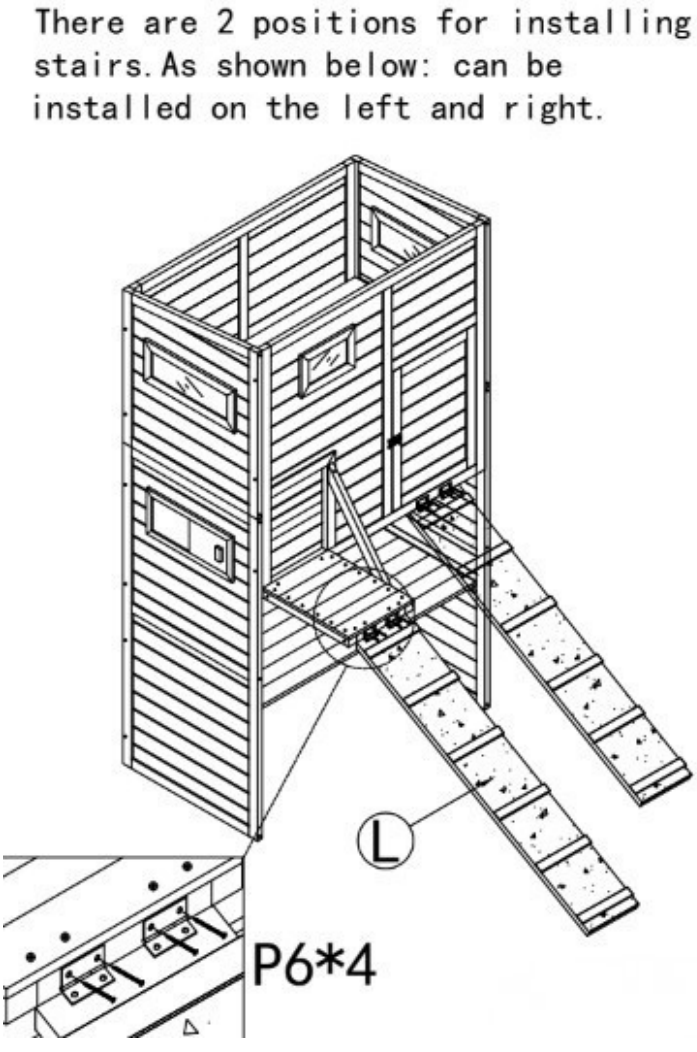

How to Assemble the Greta Step 6

PARTS


Parts required for step 6
M, N 1, N2, P

Screws required for step 6
P1 x 14

Assemble The Sides Of The Run: Place part NI next to the edge of the house as shown, taking note of the pre-drilled hole locations and ensuring the stapled wire side faces in. Locate the pre-drilled holes along the inner edge then use screws PI x 2 to attach to the house.

Next, place panel P on top of NI, ensuring the door is closest to the house. Use screws PI x 3 to attach to the house two pre-drilled holes along the upper ed of NI and use screws PI x 2 to secure to P as shown.

Repeat on the opposite side with panels N2 and M.

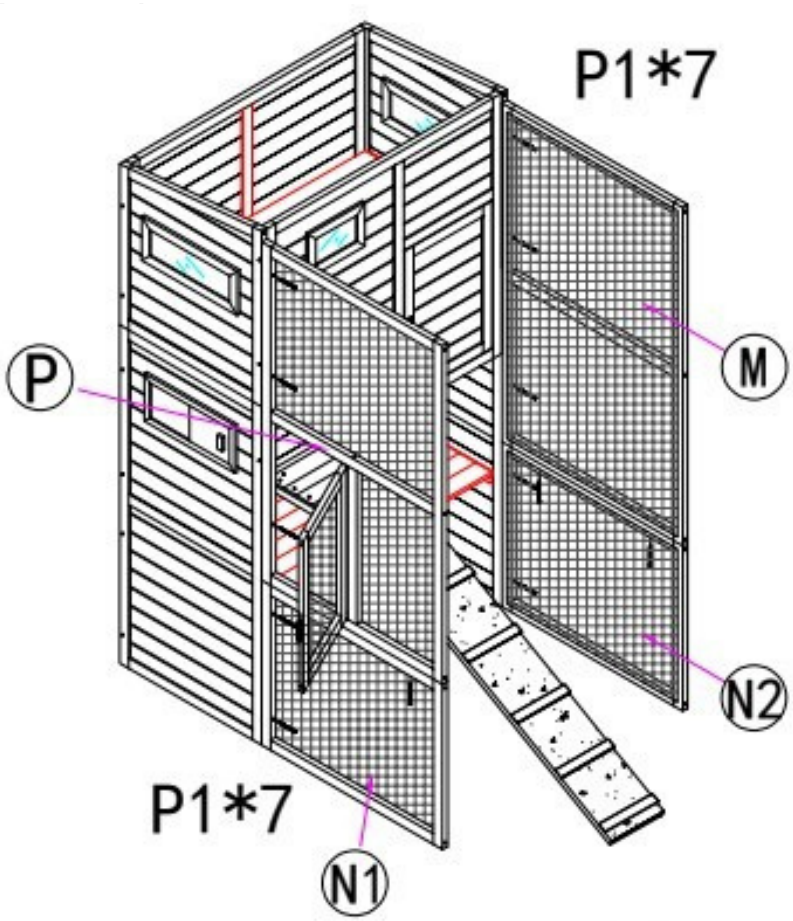


How to Assemble the Greta Step 6B

PARTS

Parts required for step 6B
K

Screws required for step 6B
P2 x 2, P1 x 2

Attach The Support Bracket: Align the support bracket K, below the small shelf, as shown. Locate the pre-drilled holes along the back edge and use screws P2 x 2 to secure to the side run panel.
Next, locate the pre-drilled holes on the top of the shelf, then use screws PI x 2 to secure the bracket to the shelf.

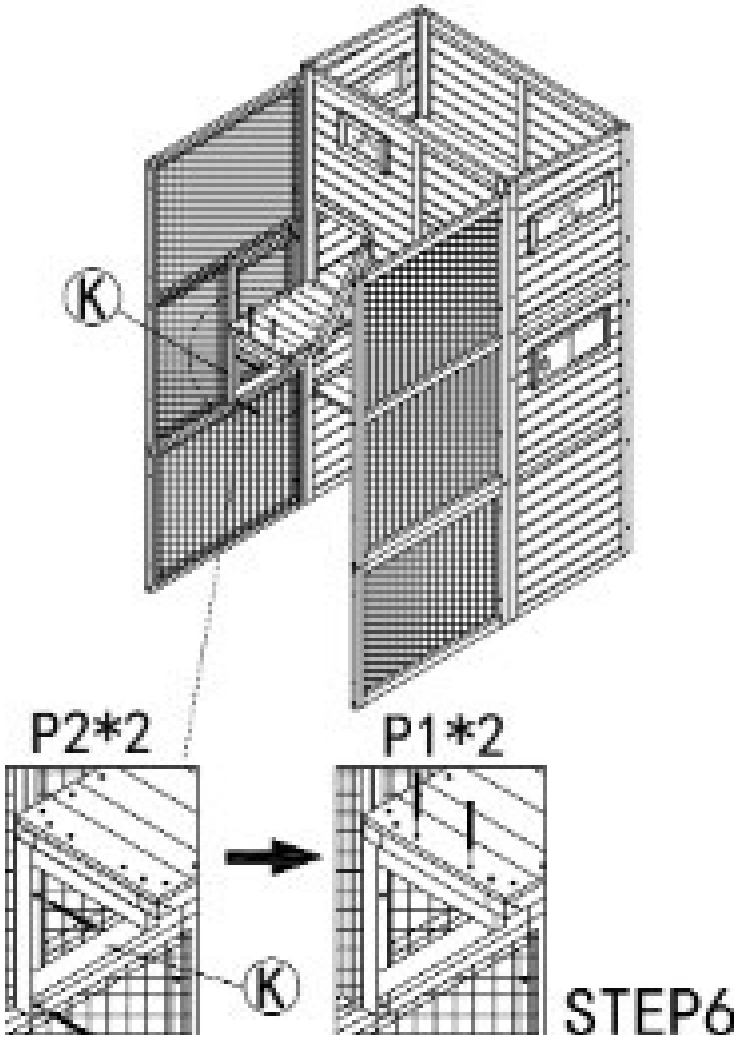

How to Assemble the Greta Step 7

PARTS

Parts required for step 7
O1, O2, Q1, Q2


Screws required for step 7
P1 x 14

Assemble the Sides of the Run: Place part OI next to the edge of the house as shown, taking note of the pre-drilled hole locations and ensuring the stapled wire side faces in. Locate the pre-drilled holes along the inner edge then use screws PI x 3 to attach to the house.

Next, place panel QI on top of OI, ensuring the door is closest to the house. Use screws PI x 2 to attach to the house.

Locate the two pre-drilled holes along the upper edge of OI and use screws PI x 2 to secure to QI as shown.

Repeat on the opposite side with panels O2 and Q2.

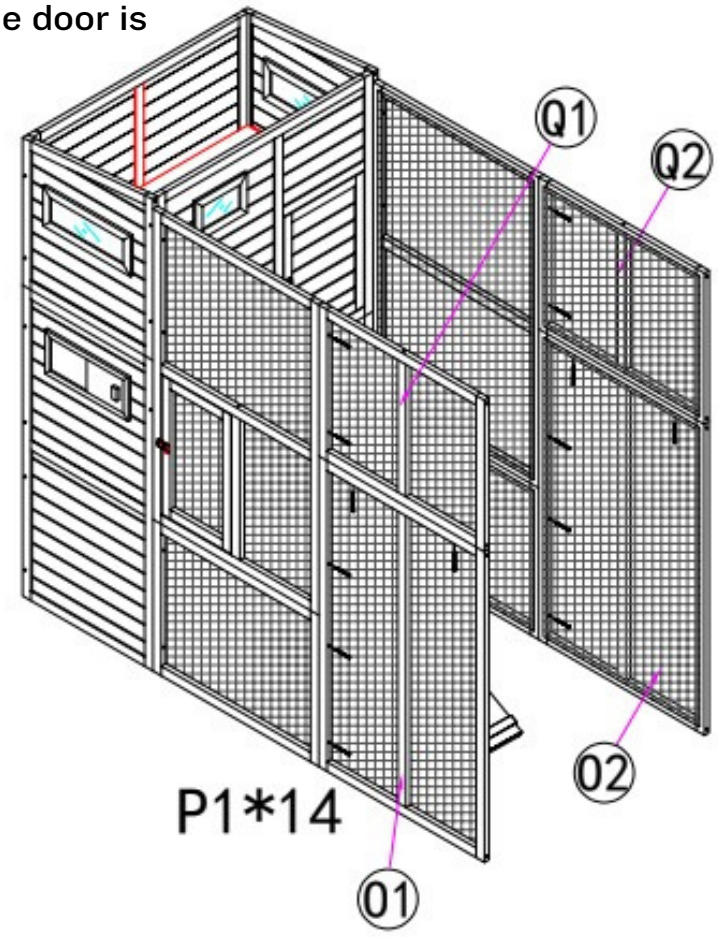

How to Assemble the Greta Step 8 & 9

PARTS

Parts required for step 8 & 9
R1, R2, S1, S2

Screws required for step 8 & 9
P1 x 14


Assemble the Sides of the Run: Place part RI next to the edge of OI as shown, taking note of the pre-drilled hole locations and ensuring the stapled wire side faces in. Locate the pre-drilled holes along the inner edge then use screws PI x 2 to attach to the middle run section.


The light brown edge of OI should be at the top.

Repeat on the opposite side with panel R2.

Next, place panel SI on top of RI, ensuring the light brown edge is at the bottom. Use screws PI x 3 to attach to the house. Locate the two pre-drilled holes along the brown upper edge of RI and use screws PI x 2 to secure to SI as shown.

Repeat on the opposite side with panel S2.

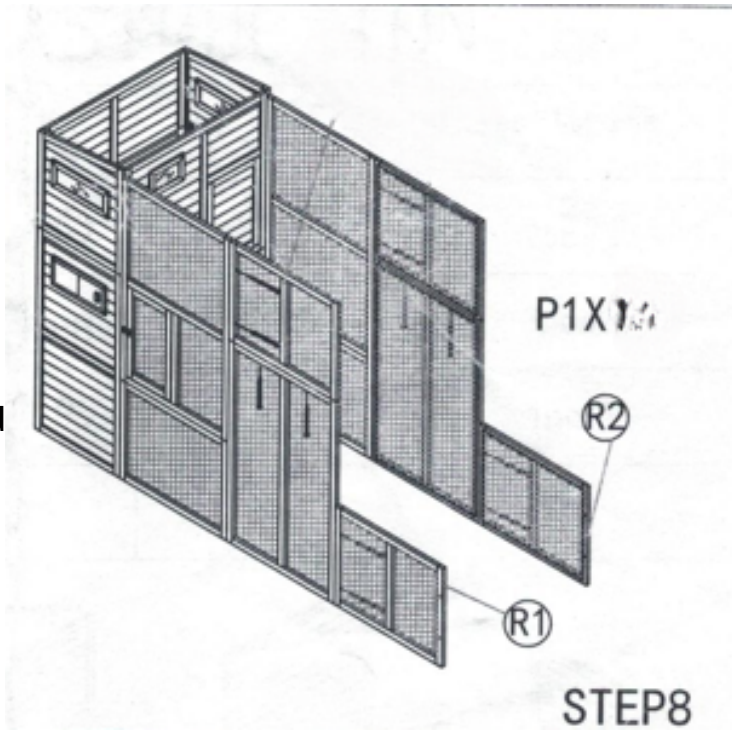

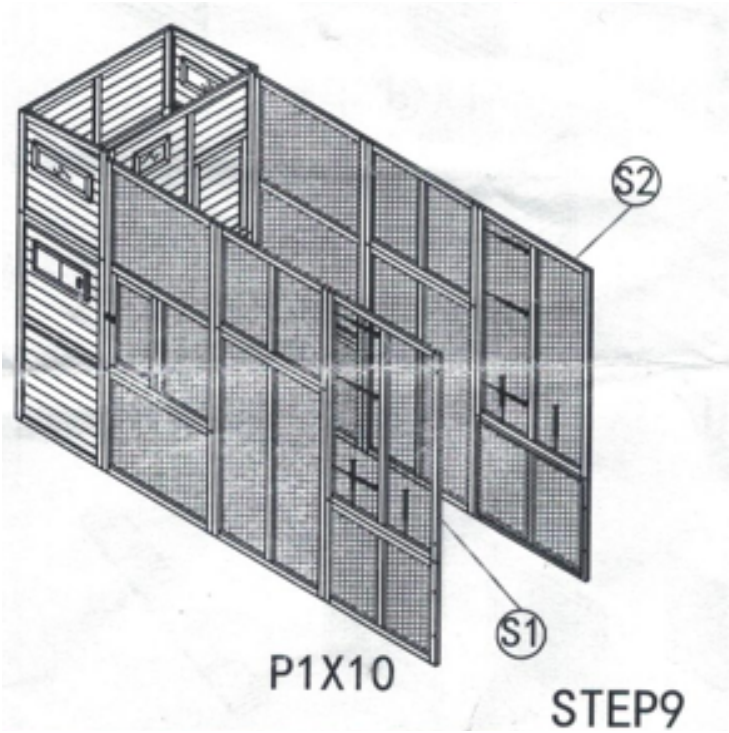

How to Assemble the Greta Step 10


PARTS


Parts required for step 10
J x 4, K x 6

Screws required for step 10
P5 x 16, P2 x 16

Adding the Shelves: There are 4 shelves to place in the run area. You can attach these wherever you like, as long as there is timber behind both brackets to secure.

Assemble the Shelves: Place 2 x K below J as shown. Ensure the pre-drilled holes are positioned at the rear of the bracket. Use screws P5 x 4 to attach the brackets to the shelves, through the pre-drilled holes on top of the shelves.

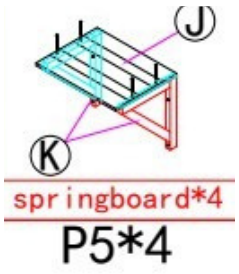

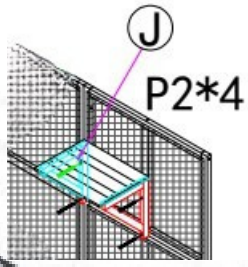

There are 4 springboards for small animals to play on, and they can be mounted on the side panels of the running cage as required.

Attach the Shelves: Place the shelves and brackets flush against the timber sections of the run. Use screws P2 x 4 to attach through the pre-drilled holes on the brackets.

How to Assemble the Greta Step II

PARTS


Parts required for step 11
V x 2, Z x 6

Screws required for step 11
P3 x 20

Attach the Top of the Run:

Place V x 2 over the top of the run, take note of the location of the pre-drilled holes. Use screws P3 x 8 to attach.

Place Z as shown to provide extra stability and strength. Use P3 x 12 to attach three on each side. Have the middle two on opposite panels for maximum stability (yellow dots).

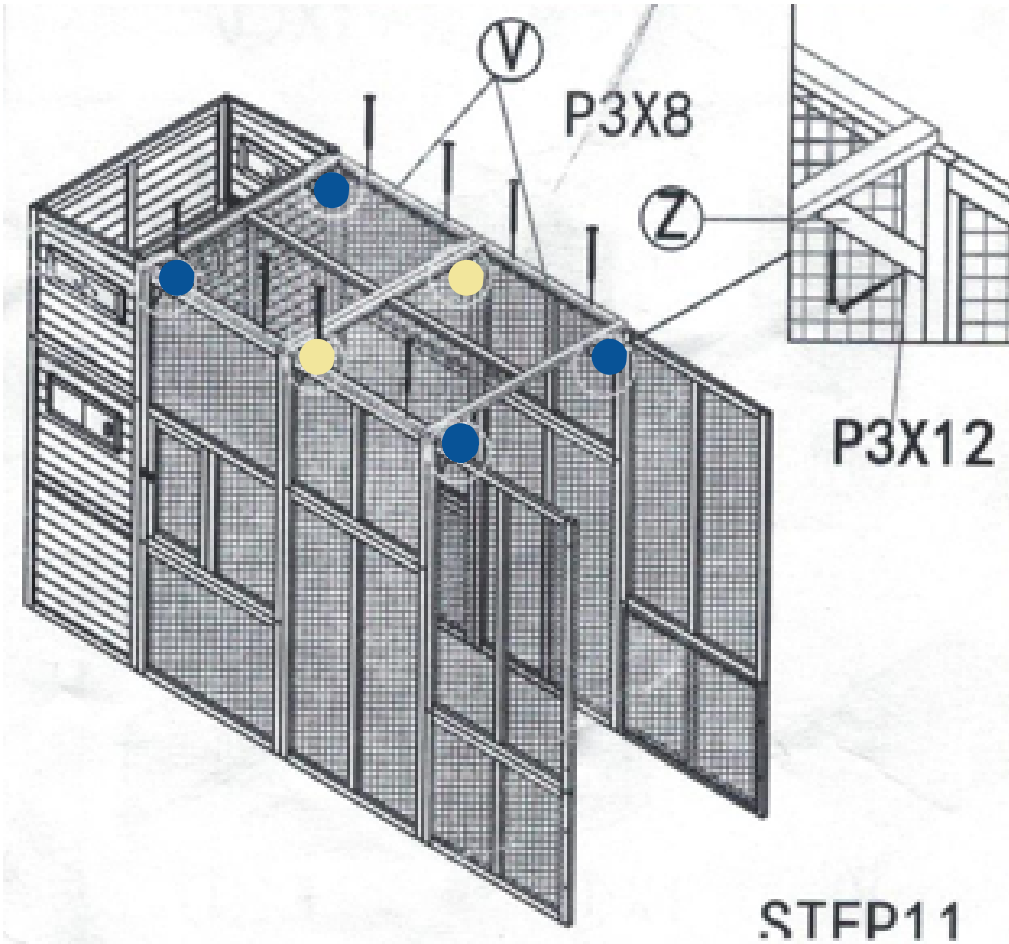

How to Assemble the Greta Step 12

PARTS

Parts required for step 12
V x 1, U, T, W


Screws required for step 12
P1 x 2, P3 x 14, P4 x 4

Attach the End of the Run: Place door panel U at the end of the run as shown. Locate the pre-drilled holes on the edge of the side panels and use screws P3 x 6 to attach to the side panels.

Place part T on top of U, then locate the pre-drilled holes along the sides and use screws P3 x 4 to attach. Next, locate the pre-drilled holes along the top edge of U. Use screws PI x 2 to join U & T together.

Place the last V panel over the top of the run, take note of the location of the pre-drilled holes. Use screws P3 x 4 to attach.

Place the last W over the top of the house, take note of the location of the pre-drilled holes. Use screws P4 x 4 to attach.

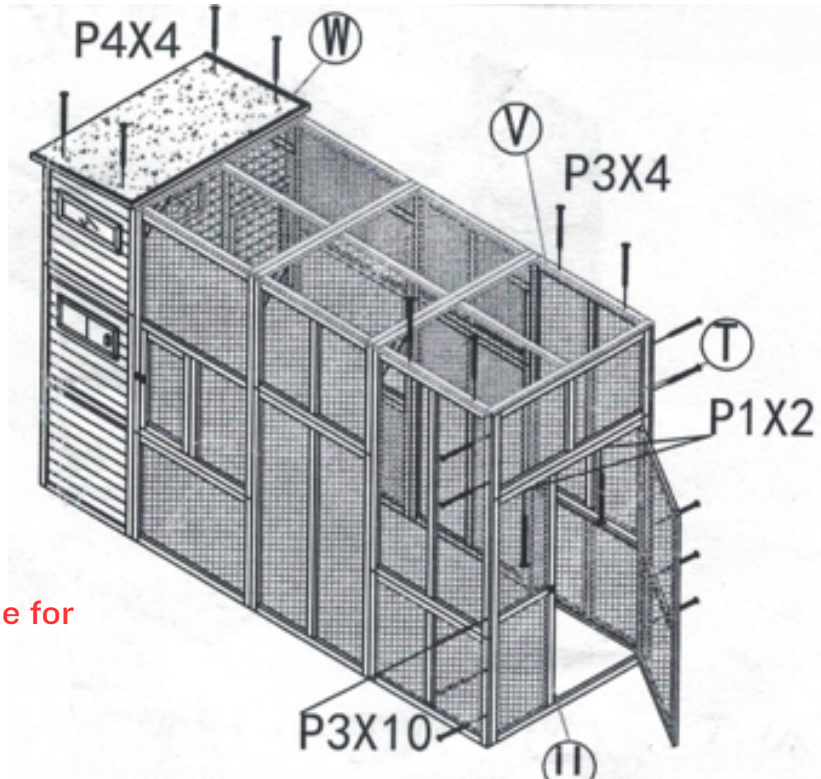

It will overhang at the front and back a little for rain to slide off easily.

Greta House Assembly Finished



FAQ

Frequently asked questions

Contact Information

Phone: 02 4340 4200

Email: info@coopsandcages.com.au

Customer Service Office Hours

Monday – Thursday: 9:00am – 4:30pm

Friday: 9:00am – 4:00pm

Saturday & Sunday: Closed

Public holidays: Closed

www.coopsandcages.com.au

#coopsandcages

Find us on Facebook

Follow us on Instagram

FOLLOW US ON Pinterest

TikTok